

dji OSMO ACTION

CAMERA & SCREEN GUIDE

Shutter Button

Battery Door

Battery compartment
& Micro SD slot

Front Display

Camera Mode
Resolution, Counter
Time/Storage/Files
Battery Life

Mode Change
& On/Off button

Side Door

USB-C charge port



TOUCH SCREEN DIAGRAM

1. mSD card capacity in minutes
2. PLAYBACK - image review
3. Battery charge - Press to reveal percentage
4. PRO settings
5. Shooting Mode (Video or Photo etc)
6. Video / Photo Settings / Steady shot

Please note, touch screen is **not accessible underwater**