

DJI OSMO ACTION

4 Record Video / Take Photo



Side Button

Long push: ON/OFF
Short push: Change mode

Snap Shot Video / Photo


to capture unexpected special moments

Press Top Button (4), the camera will turn on and start recording in 3 Secs.

Press (4) again to stop recording, and the camera will turn off.

Opening and Closing The Housing


Only do this in a dry area when your hands are dry.

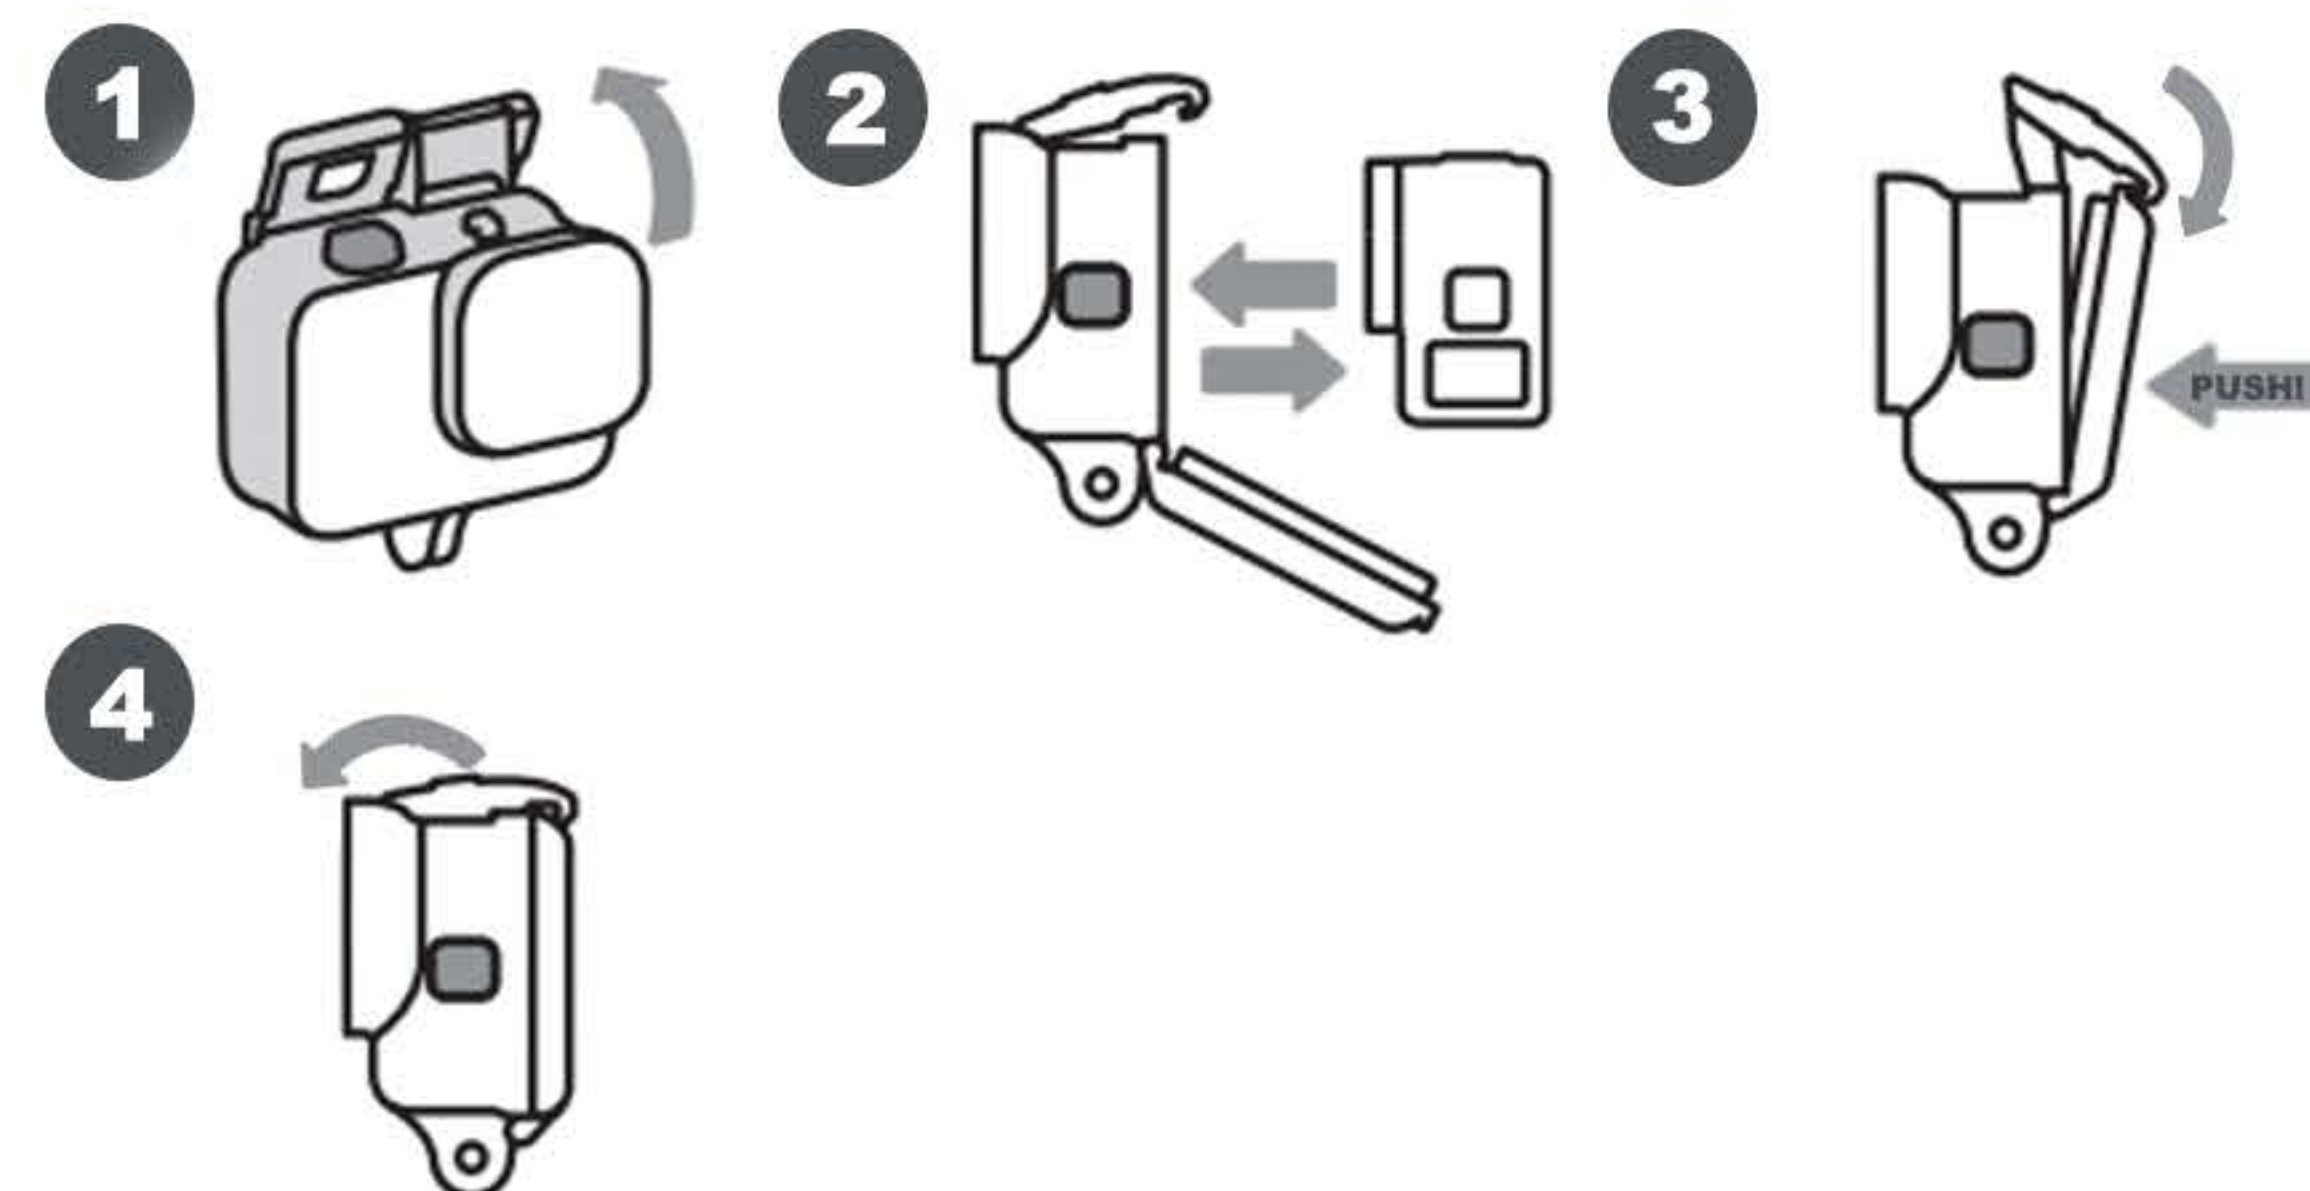

- 1 Unclip the latch from the front of the camera
- 2 Put in or take camera out of the housing.
- 3 Push the back door. Attach the latch on the top end of the back door.
- 4 Push the latch forward. Done!

Change Battery / Swap A Memory Card

Only do this in a dry area when your hands are dry.

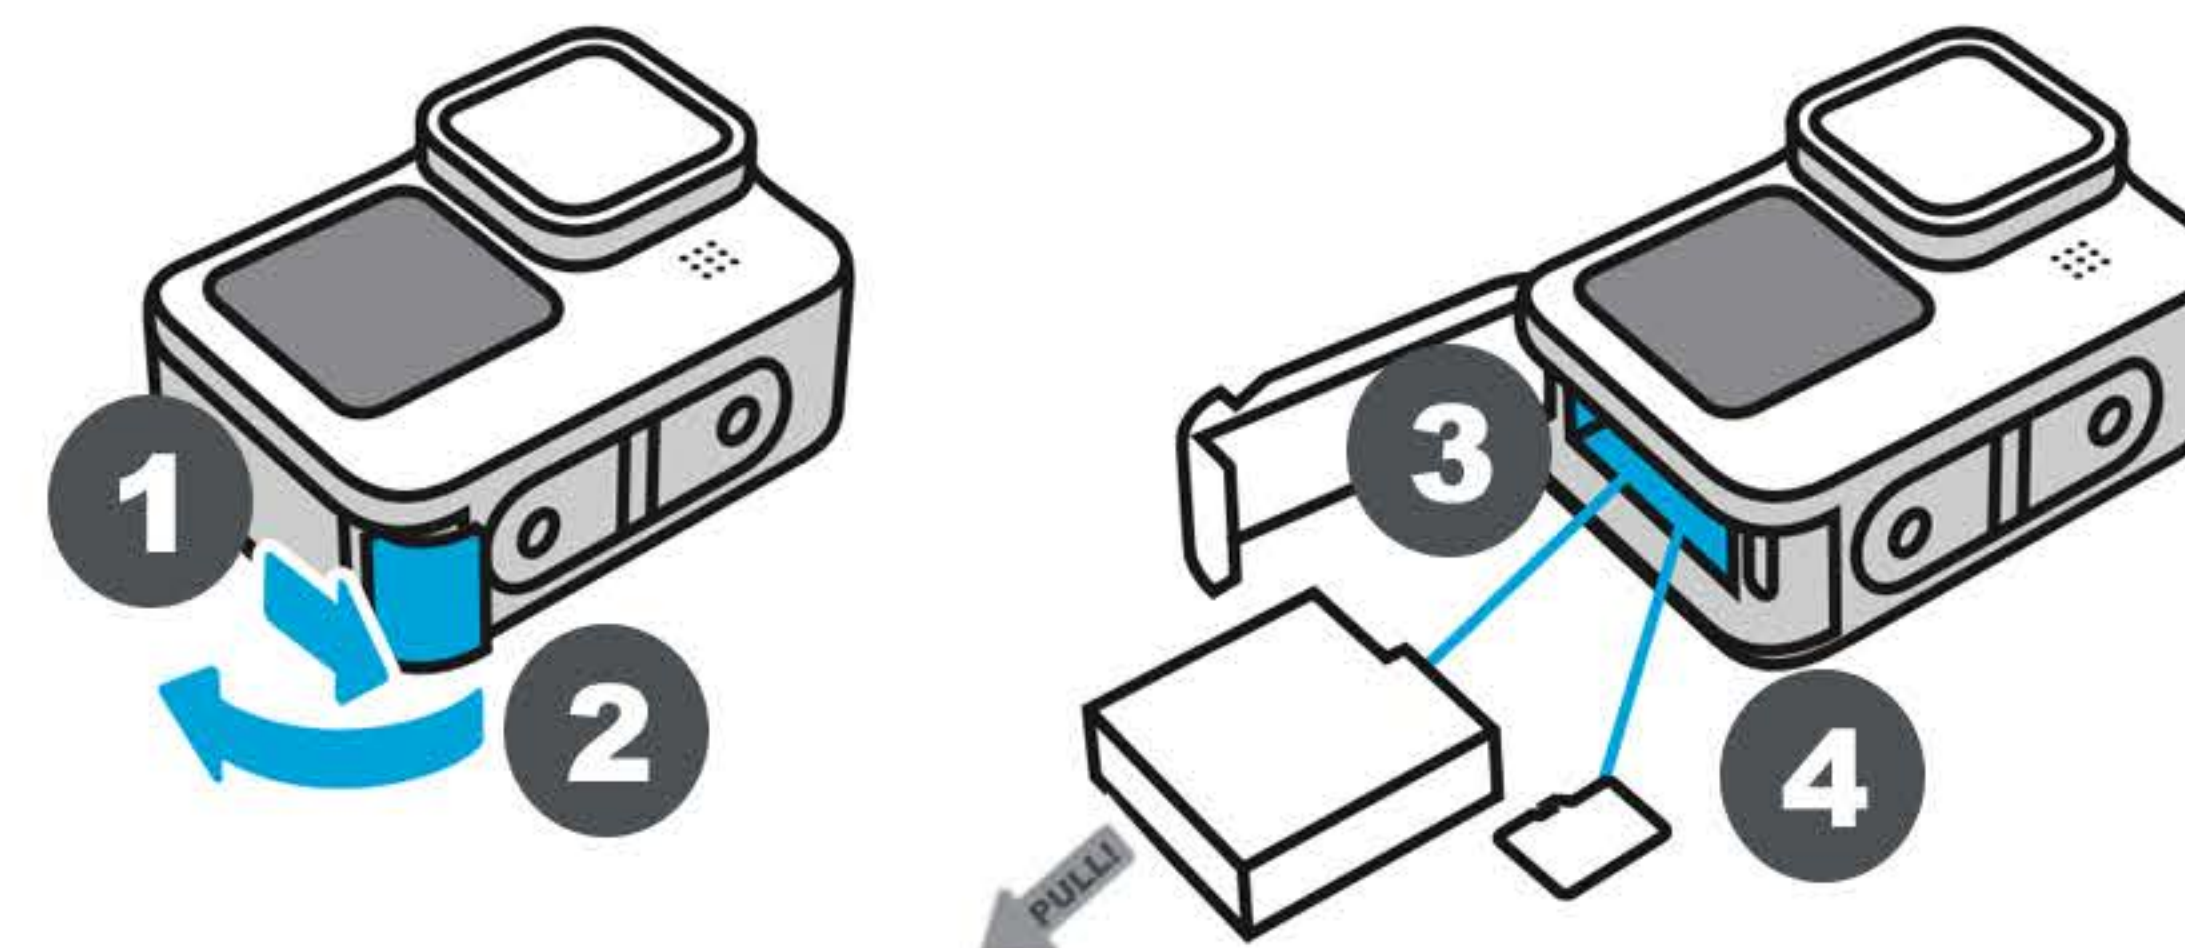

- 1 Pull the battery door downward
- 2 Lift the battery door upward
- 3 Pull the battery out of the camera put a new battery in.
- 4 Give the memory card a push, it will come out