

BUTTON & SCREEN GUIDE FOR OLYMPUS TG5




OPENING THE HOUSING

Make sure your hands are dry and you are in a dry place!

ONLY OPEN IF YOU NEED TO!

- 1 Push lock to LEFT as per direction of arrow.
(Picture shown is unlocked).
2. Push second lock UP & hold
- 3 While holding 2nd lock, turn dial following the OPEN direction arrow.

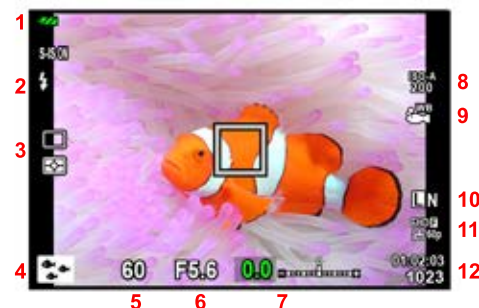

SCREEN GUIDE

- | | |
|-----------------------------------|-----------------------------|
| 1. Battery Life | 7. Exposure |
| 2. Flash Settings | 8. ISO |
| 3. Metering and Pro Capture icons | 9. White Balance |
| 4. Underwater Setting | 10. Photo Quality |
| 5. Video Frames | 11. Video Quality |
| 6. F Stop | 12. Photo & Video Countdown |